



FURUKAWA ROCK DRILL SPARE PARTS



Furukawa marka kaya delici makineler için yedek parçalarımız, yüksek kalite standartlarına sahip olup, makinelerinizin verimliliğini artırmak ve iş sürekliliğinizi maksimum düzeye çıkarmak için tasarlanmıştır. Müşteri memnuniyetine odaklanarak, ihracat faaliyetlerimizde hızlı teslimat, güvenli ambalajlama ve teknik destek gibi önemli hizmetler sunmaktayız.



We specialize in Furukawa spare parts, providing high-quality and reliable components for your Furukawa rock drilling machines. Our spare parts are designed to enhance the performance of your Furukawa machines, ensuring maximum efficiency and operational continuity. With a focus on customer satisfaction, our export activities encompass fast delivery, secure packaging, and technical support services.

CONTACT US



+90 551 855 51 91



info@rockanddrill.com



HAKKIMIZDA

Biz, yedek parça sektöründe öncü bir firma olarak, yüksek kaliteli ve dayanıklı yedek parçalar sunmaktayız. Makinelerinizi sürekli çalışır durumda tutmanızı sağlamak için ihtiyaç duyduğunuz tüm parçaları sağlamak için buradayız. İhracat odaklı olarak çalışan bir şirket olarak, müşterilerimize uluslararası pazarda da hizmet vermekten gurur duyuyoruz. Firma olarak amacımız, müşterilerimize en iyi kalitede yedek parçaları sunmak ve onların işlerini kolaylaştırmaktır. Müşteri memnuniyeti bizim için en öncelikli konudur ve bu nedenle müşterilerimize en iyi hizmeti sunmak için çalışıyoruz. Geniş bir ürün yelpazesi sunarak, farklı marka ve modeller için uygun yedek parçaları sağlamaktayız. Müşteri odaklı yaklaşımımızla, ihtiyaçlarınıza yönelik çözümler sunmayı hedefliyoruz. Alanında deneyimli ve uzman bir ekip tarafından desteklenen şirketimiz, hızlı ve güvenilir bir hizmet sunarak müşterilerimizin işlerini kesintiye uğratmadan devam ettirmelerini sağlamaktadır. Tüm yedek parçalarımız, kalite standartlarına uygun olarak üretilmiş ve test edilmiştir, böylece dayanıklılık ve performans açısından en üst düzeyde güvenilirlik sağlanmaktadır. Ayrıca, müşterilerimizin ihtiyaçlarına yönelik özelleştirilmiş çözümler sunmaktan da memnuniyet duyuyoruz. Eğer belirli bir yedek parçayı bulmakta zorlanıyorsanız, uzman ekibimiz size yardımcı olmak için buradadır. İhracata yönelik çalışmalarımızla, dünya genelindeki müşterilere ulaşarak, yüksek kaliteli yedek parçaları tedarik etmekteyiz. Bizimle çalışan müşterilerimize güvenilirlik, kalite ve profesyonellik sunmayı taahhüt ediyoruz. Uzun vadeli iş ilişkileri kurarak müşterilerimizin başarılarına katkıda bulunmak istiyoruz. Şirketimizin bir parçası olarak, işinizi kolaylaştırmak ve makinelerinizin verimli bir şekilde çalışmasını sağlamak için her zaman buradayız. Yedek parça ihtiyaçlarınız için bize ulaşmaktan çekinmeyin. Sizlere en iyi hizmeti sunmak için sabırsızlıkla bekliyoruz!



ABOUT US

We are a leading company in the spare parts industry, providing high-quality and durable spare parts. We are here to supply all the parts you need to keep your machines running smoothly. As an export-oriented company, we take pride in serving our customers in the international market. Our company's goal is to provide our customers with the best quality spare parts and make their lives easier. Customer satisfaction is our top priority, and that's why we strive to offer the best service to our customers. We provide a wide range of products, offering suitable spare parts for different brands and models. With our customer-oriented approach, we aim to provide solutions tailored to your needs. Supported by an experienced and expert team, our company offers fast and reliable service, allowing our customers to continue their operations without interruption. All our spare parts are produced and tested according to quality standards, ensuring the highest level of reliability in terms of durability and performance. In addition, we are pleased to offer customized solutions to meet our customers' needs. If you're having trouble finding a specific spare part, our expert team is here to assist you. Through our export activities, we supply high-quality spare parts to customers worldwide. We commit to providing reliability, quality, and professionalism to our customers. We aim to contribute to our customers' success by establishing long-term business relationships. As part of our company, we are here to make your life easier and ensure that your machines operate efficiently. Feel free to reach out to us for your spare part needs. We are eagerly looking forward to providing you with the best service.

FURUKAWA ROCK DRILL SPARE PARTS





Müşteri memnuniyetini her zaman önceliğimiz olarak kabul ediyoruz ve müşterilerimizin ihtiyaçlarını karşılamak için en iyi çözümleri sunmaya çalışıyoruz. Yedek parça kataloğumuzda bulunmayan özel veya nadir parçaları arıyorsanız, bizimle iletişime geçmenizden mutluluk duyarız.



We prioritize customer satisfaction and strive to provide the best solutions to meet our customers' needs. If you are looking for special or rare parts that are not available in our spare parts catalog, we would be very pleased if you could contact us.



+90 551 855 51 91



info@rockanddrill.com

www.rockanddrill.com



HD609-02012
CHUCK



HD609-02006
CHUCK DRIVER BUSH



HD709-01012 BUSH
FRONT



HD709-01043
RETAINER SEAL



HD709-02003
DRIVER CHUCK



HD709-02202 BUSH
FRONT



HD709-02203 BODY
SWIVEL



HD709-02333 PISTON
DAMPING RP



HD712-01043
RETAINER SEAL



HD712-02346
RETAINER SEAL




HD712-02350
BEARING PLAIN RP




HD712-02351
BEARING PLAIN



HD709-03602
BOLT

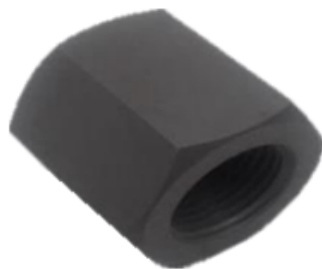


HD615-03605
NUT

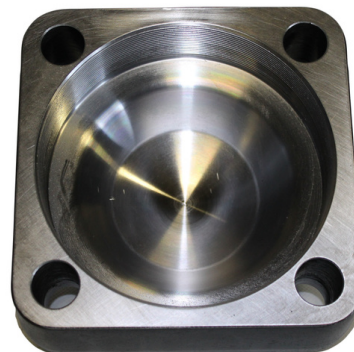

97002
ACCUMULATOR



HD609-03601
BOLT THROUGH

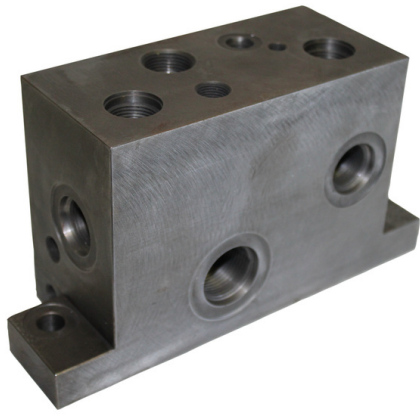

025104-01019
MANIFOLD



081300-01048
SPROCKET FRONT



081900-01008
SPROCKET FRONT



083002-02013
SPROCKET



083002-02015
SHAFT SPROCKET



07006
DIAPHRAGM



083204-030310
PLATE WEAR



HD709-712-715 01101
PISTON

Please contact us for parts that are not in the catalogue.

Spare Parts Codes



988500-1401 IMPELLER	FURUKAWA
988500-14001 IMPELLER	FURUKAWA
988500 - 13001 VALVE DIAPHRAGM	FURUKAWA
985503-21032 CYLINDER,SLIDE	FURUKAWA
983103-010110 GUIDE SHELL ASS'Y	FURUKAWA
983002-040740 ROD HOLDOR ASSY	FURUKAWA
940213-030040 BY PASS VALVE	FURUKAWA
925204-10013 MOTER, OIL	FURUKAWA
925104-01008 VALVE BLOK	FURUKAWA
8300071-1002104 PISTON	FURUKAWA
280100-06211 BEARING BALL	FURUKAWA
280100-06211 BEARING BALL	FURUKAWA
280100-06209 BEARING, BALL	FURUKAWA
272040-06211 SEAL OIL	FURUKAWA
264020-00056 RING,SNAP	FURUKAWA
264020-00055 RING, SNAP	FURUKAWA
262022-00055 RING, BACK-UP	FURUKAWA
170322-00000 NIPPLE, GREASE	FURUKAWA
170312-00000 NIPPLE,GREASE	FURUKAWA
161021-00055 O-RING	FURUKAWA
161011-00024 BONDED SEAL	FURUKAWA
161011-00016 O-RING	FURUKAWA
160021-00055 O-RING	FURUKAWA
160011-00011 O-RING	FURUKAWA
160011-00008 O-RING	FURUKAWA
153008-08065 PIN,SPLIT	FURUKAWA
153008-08060 PIN, SPLIT	FURUKAWA
153008-08055 PIN,SPLIT	FURUKAWA
145012-16000 WASHER SPRING	FURUKAWA
145012-16000 SPRING,WASHER	FURUKAWA
141192-24000 WASHER	FURUKAWA
120142-24000 NUT	FURUKAWA
120142-16000 NUT	FURUKAWA
120122-3000 NUT	FURUKAWA
120122-16000 NUT	FURUKAWA
102032-20085 BOLT,SOCKET	FURUKAWA
088412-01061 FAN, RADIAL	FURUKAWA

088412-01060 INPELLER	FURUKAWA
085505-02040 BUSH,CELEVIS	FURUKAWA
085504-21011 BUSH,CELEVIS	FURUKAWA
085503-21039 PISTON	FURUKAWA
085503-21038 ROD,PISTON	FURUKAWA
085503-21033 TUBE,CYLINDER	FURUKAWA
085503-21020 COVER,ROD	FURUKAWA
084891-02000 PLUG,GPF	FURUKAWA
084891-01000 PLUG,GPF	FURUKAWA
084886-67006 CONNECTOR,ELBOW	FURUKAWA
083204-04019 SLIDER	FURUKAWA
083204-030320 PLATE,GUIDE	FURUKAWA
083204-030310 PLATE,WEAR	FURUKAWA
083204-030300 PLATE,GUIDE	FURUKAWA
083204-030290 PLATE,WEAR	FURUKAWA
083204-030280-290-300 PLATE WEAR	FURUKAWA
083204-030280 PLATE	FURUKAWA
083204-03020 SHIM	FURUKAWA
083204-03019 SHIM	FURUKAWA
083204-02024 HOLDER, PIN	FURUKAWA
083203-04029 CAP,SUCTION	FURUKAWA
083203-04028 CUP SUCTION	FURUKAWA
083203-04018 COVER, CAP	FURUKAWA
083203-04017 CAP,SUCTION	FURUKAWA
083203-01028 SHAFT, SPROCKET	FURUKAWA
083203-01015 COLLAR, GUIDE	FURUKAWA
083103-03017 PLATE WEAR	FURUKAWA
083103-02011 GUIDE,CHAIN	FURUKAWA
083103-01014 COLLAR,GUIDE	FURUKAWA
083003-01007 ADJUSTER,CHAIN	FURUKAWA
083002-04068 PAD,FOOT	FURUKAWA
083002-04048 CAP,SUCTION	FURUKAWA
083002-04031 SLIDER	FURUKAWA
083002-04021 HOLDER,ROD(R)	FURUKAWA
083002-04019 HOLDER,ROD(L)	FURUKAWA
083002-04018 PIN,PLATE	FURUKAWA
083002-04012 PIN,PLATE	FURUKAWA

083002-04011 PIN,ARM	FURUKAWA
083002-04008 ARM	FURUKAWA
083002-02016 PLATE KEY	FURUKAWA
083002-02015 SHAFT, SPROCKET	FURUKAWA
083002-02013 SPROCKET	FURUKAWA
083002-02012 SPROCKET	FURUKAWA
083002-01009 ADJUSTER,CHAIN	FURUKAWA
083002-01008 ADJUSTER CHAIN	FURUKAWA
083002--04050 COVER, CAP	FURUKAWA
083002--04048 CAP, SUCTION	FURUKAWA
082404-01013 BUSH	FURUKAWA
082404-01011 PIN	FURUKAWA
082404-01010 PIN,PLATE	FURUKAWA
082404--01013 BUSH	FURUKAWA
082404--01009 PIN, PLATE	FURUKAWA
082404--01005 BASE, CLAMP ARM (R)	FURUKAWA
082404--01004 BASE. CLAMP ARM (L)	FURUKAWA
082404--01002 CLAMP,SLEEVE	FURUKAWA
082403-02025 SHAFT, GUIDE	FURUKAWA
082403-02012 BEARING	FURUKAWA
082403--03013 PIN, PLATE	FURUKAWA
082403--01016 BUSH	FURUKAWA
082402-01014 SPRIN,PLUNGER	FURUKAWA
082402-01009 RATCHET	FURUKAWA
082402-01002 ARM,SWING(B)	FURUKAWA
082401-01048 ARM, SWING (F)	FURUKAWA
082401-01028 PLATE TANSION	FURUKAWA
082401-01027 BRACKET, SWING ARM (B)	FURUKAWA
082401-01026 BRACKET, SWING ARM (F)	FURUKAWA
082401-01015 BUSH	FURUKAWA
082401-01005 PIN,SWING	FURUKAWA
082200-02017 BRACKET, ROLLER	FURUKAWA
082200-02007 BRACKET, ROLLER	FURUKAWA
082005-02009 PIN	FURUKAWA
082005-02007 PIN,PLATE	FURUKAWA
082005-01028 PLUG, CYLINDER	FURUKAWA
082005-01026 CYLINDER	FURUKAWA

082001-01025 PIN	FURUKAWA
082001-01021 PIN,PLATE	FURUKAWA
082001-01005 SPACER ROD	FURUKAWA
081900-02041 CAM FOLLOWER	FURUKAWA
081900-02040 CAM FOLLOWER	FURUKAWA
081900-020380 ROLLER	FURUKAWA
081900-020370 ROLLER, URETHANE	FURUKAWA
081900-020350 SHAFT ROLLER	FURUKAWA
081900-02030 SHIM	FURUKAWA
081900-02029 PLATE,GUIDE	FURUKAWA
081900-02028 BRACKET, ROLLER	FURUKAWA
081900-02027 BRACKET, ROLLER	FURUKAWA
081900-02025 GUIDE, CHAIN	FURUKAWA
081900-02010 SHAFT,ROLLER	FURUKAWA
081900-02009 ROLLER	FURUKAWA
081900-01051 COLLAR, GUIDE	FURUKAWA
081900-01050 SHAFT,FRONT	FURUKAWA
081900-01013 WASHER	FURUKAWA
081900-01011 ADJUSTER, CHAIN	FURUKAWA
081900-01010 BEARING,FRONT SHAFT	FURUKAWA
081900-01008 SPROCKET,FRONT	FURUKAWA
081700-01006 WASHER	FURUKAWA
081505-01051 BEARING,OILLESS	FURUKAWA
081300-05037 HALF BUSHING 45 - 63	FURUKAWA
081300-05036 HALF BUSHING 51 - 72	FURUKAWA
081300-05033 HALF BUSHING 45 - 66	FURUKAWA
081300-05032 HALF BUSHING 38 - 55	FURUKAWA
081300-05012 SCREW SET	FURUKAWA
081300-01050 BEARING, FRONT SHAFT	FURUKAWA
081300-01048 SPROCKET, FRONT (A)	FURUKAWA
081300-01027 SHAFT,FRONT	FURUKAWA
081300-01007 ADJUSTER,CHAIN	FURUKAWA
080900-05017 PIN,HOLDER	FURUKAWA
080900-05007 BUSH,HOLDER	FURUKAWA
080204-11017 BUSHING,HALF	FURUKAWA
080204-040211 ARM SLIDE(R)	FURUKAWA
080204-040201 PLATE	FURUKAWA

080204-04019 PLATE	FURUKAWA
080204-04016 CLAMP 77A	FURUKAWA
080204-030630 NUT	FURUKAWA
080204-030630 NUT	FURUKAWA
080204-030620 BUSH	FURUKAWA
080204-030371 ARM SLIDE(F)	FURUKAWA
080204-03029 PLATE STOPPER	FURUKAWA
080204-03028 CLAMP 51D	FURUKAWA
080204-03027 CLAMP 51C	FURUKAWA
080204-03026 CLAMP 51B	FURUKAWA
080204-03025 CLAMP 51A	FURUKAWA
080204-01039 SHAFT CLAMP(M)	FURUKAWA
080204-01038 SHAFT CLAMP(F)	FURUKAWA
080102-05026 ARM,SWING	FURUKAWA
080102-05005 PIN,PLATE	FURUKAWA
080102-04034 ROD.PISTON	FURUKAWA
080102-04026 ROLLER	FURUKAWA
080102-04020 ROLLER	FURUKAWA
080102-01051 PIN,PLATE	FURUKAWA
040213-01012 BOLT	FURUKAWA
032614-03014 PLATE GUIDE	FURUKAWA
032614-03013 PLATE WEAR	FURUKAWA
030800-03039 PLATE, GUIDE	FURUKAWA
015004-02045 FOLLOWER,CAM	FURUKAWA
007620-2009 CONNECTOR	FURUKAWA
007320-60003 WASHER	FURUKAWA
007120-70134 VALVE ACCUM	FURUKAWA
007120-70134 VALVE	FURUKAWA
007010-70030 PLUG	FURUKAWA
007010-70029 CAP	FURUKAWA
007010-70029 CAP	FURUKAWA
007010-60012 NUT	FURUKAWA
007010-60012 NUT	FURUKAWA
007010-10019 WASHER	FURUKAWA
002501-250120 SHANK QT45	FURUKAWA
002501-250110 SHANK	FURUKAWA
002501-230060 WASHER THRUST(B)	FURUKAWA

002501-220020 BUSH, FRONT	FURUKAWA
002501-200050 CHUCK	FURUKAWA
002501-150040 PISTON BUSHING	FURUKAWA
002501-150030 PISTON DAMPING	FURUKAWA
002501-100071 RETAINER SEAL (R)	FURUKAWA
002501-100040 RETAINER SEAL (F)	FURUKAWA
002501-100030 BUSH (F)	FURUKAWA
002501-100020 SPACER	FURUKAWA
00170-36102 NUT	FURUKAWA
T51 SHANK FURUKAWA	FURUKAWA
HD715-06018 NUT	FURUKAWA
HD715-06015 NUT	FURUKAWA
HD715-06014 WASHER	FURUKAWA
HD715-06013 BOLT SOCKET	FURUKAWA
HD715-03634 BOLT	FURUKAWA
HD715-03606 BOLT	FURUKAWA
HD715-03605 NUT	FURUKAWA
HD715-02351 PLAIN BEARING	FURUKAWA
HD715-02349 COVER	FURUKAWA
HD715-02347 WASHER THRUST	FURUKAWA
HD715-02343 PISTON DAMPING	FURUKAWA
HD715-02203 HOZING	FURUKAWA
HD715-02202 SHANK BUSHNG	FURUKAWA
HD715-02105 BEARING PLAIN	FURUKAWA
HD715-02103 WASHER THRUST	FURUKAWA
HD715-02102 BEARING	FURUKAWA
HD715-02025 CHUCK DRIVER BUSH	FURUKAWA
HD715-02007 GEAR,DRIVE	FURUKAWA
HD715-02006 CHUCK	FURUKAWA
HD715-02004 BEARING PLAIN	FURUKAWA
HD715-01530 PISTON BUSHING	FURUKAWA
HD715-01529 PISTON DAMPING	FURUKAWA
HD715-01508 PISTON DAMPING	FURUKAWA
HD715-01505 PISTON BUSHING	FURUKAWA
HD715-01101 PISTON	FURUKAWA
HD715-01068 PLUG	FURUKAWA
HD715-01067 VALVE	FURUKAWA

HD715-01060 VALVE	FURUKAWA
HD715-01046 SEAL RETAINER	FURUKAWA
HD715-01040 RETAINER SEAL(F)	FURUKAWA
HD715-01013 NUT	FURUKAWA
HD715-01012 ADJUSTER, STROKE	FURUKAWA
HD715-01008 REAR BUSHING	FURUKAWA
HD715-01002 FRONT BUSHING	FURUKAWA
HD712-99184 SEAL KIT	FURUKAWA
HD712-99105	FURUKAWA
HD712-07002 BODY ACCUMULATOR	FURUKAWA
HD712-07001 COVER ACCUMULATOR	FURUKAWA
HD712-03602 NUT	FURUKAWA
HD712-03601 BOLT	FURUKAWA
HD712-02536 ROD,SHANK	FURUKAWA
HD712-02505 ROD,SHANK	FURUKAWA
HD712-02351 BEARING PLAIN	FURUKAWA
HD712-02350 BEARING PLAIN	FURUKAWA
HD712-02347 WASHER THRUST	FURUKAWA
HD712-02346-02345 RETAINER SEAL	FURUKAWA
HD712-02343 PISTON DAMPING	FURUKAWA
HD712-02331 CAP,FRONT	FURUKAWA
HD712-02327 PUL	FURUKAWA
HD712-02306 RING,GRIDE	FURUKAWA
HD712-02304 RING,GRIDE	FURUKAWA
HD712-02203 SWIVEL BODY	FURUKAWA
HD712-02202 FRONT BUSH	FURUKAWA
HD712-02104 PLAIN BEARING (F)	FURUKAWA
HD712-02103-02347 WASHER THRUST	FURUKAWA
HD712-02031 CHUCK DRIVER BUSH	FURUKAWA
HD712-02025-S CHUCK DRIVER DUSH	FURUKAWA
HD712-02025 CHUCK DRIVER BUSH	FURUKAWA
HD712-02023 BEARING PLAIN	FURUKAWA
HD712-02006 CHUCK	FURUKAWA
HD712-02004 BEARING PLAIN	FURUKAWA
HD712-02003 DRIVER CHUCK	FURUKAWA
HD712-01528 PISTON BUSHING	FURUKAWA
HD712-01527 PISTON DAMPING	FURUKAWA

HD712-01101 PISTON	FURUKAWA
HD712-01068 VALVE	FURUKAWA
HD712-01067 PLUG	FURUKAWA
HD712-01066 VALVE	FURUKAWA
HD712-01063	FURUKAWA
HD712-01062 VALVE	FURUKAWA
HD712-01061 PLUG	FURUKAWA
HD712-01060 VALVE	FURUKAWA
HD712-01045 RING GRIDE	FURUKAWA
HD712-01044 SEAL STEP	FURUKAWA
HD712-01043 RETAINER SEAL(R)	FURUKAWA
HD712-01040 RETAINER SEAL(F)	FURUKAWA
HD712-01012 FRONT BUSHING	FURUKAWA
HD712 020 03 DRIVER CHUCK	FURUKAWA
HD709-99104 SEAL KIT	FURUKAWA
HD709-03605 NUT	FURUKAWA
HD709-03604 BOLT	FURUKAWA
HD709-03603 BOLT,THROUGH	FURUKAWA
HD709-03602 BOLT SET	FURUKAWA
HD709-03601 BOLT	FURUKAWA
HD709-02502 T45 SHANK	FURUKAWA
HD709-02347 WASHER THRUST	FURUKAWA
HD709-02341 BEARING PLAIN	FURUKAWA
HD709-02340 BEARING PLAIN	FURUKAWA
HD709-02340 BEARING PLAIN	FURUKAWA
HD709-02337 WASHER, THRUST	FURUKAWA
HD709-02336 RETAINER SEAL	FURUKAWA
HD709-02333 PISTON DAMPING	FURUKAWA
HD709-02221 CAP, FRONT	FURUKAWA
HD709-02203 BODY, SWIVEL	FURUKAWA
HD709-02202 SHANK BUSHING	FURUKAWA
HD709-02104 PLAIN BEARING	FURUKAWA
HD709-02103 WASHER THRUST	FURUKAWA
HD709-02025-S CHUCK DRIVER BUSH	FURUKAWA
HD709-02025 CHUCK DRIVER BUSH	FURUKAWA
HD709-02008 PLAIN BEARING	FURUKAWA
HD709-02007 GEAR. DRIVE	FURUKAWA

HD709-02006 CHUCK	FURUKAWA
HD709-02004 BEARING	FURUKAWA
HD709-02003 DRIVER,CHUCK	FURUKAWA
HD709-01529 PISTON BUSHING	FURUKAWA
HD709-01528 PISTON DAMPING	FURUKAWA
HD709-01507 PISTON BUSHING	FURUKAWA
HD709-01504 PISTON ,DAMPING	FURUKAWA
HD709-01101 PISTON	FURUKAWA
HD709-01065 VALVE	FURUKAWA
HD709-01065 PLUG	FURUKAWA
HD709-01064 VALVE	FURUKAWA
HD709-01048 SEAL, STEP	FURUKAWA
HD709-01045 RING, GRIDE	FURUKAWA
HD709-01043-01049 RETAINER SEAL	FURUKAWA
HD709-01040 RETAINER SEAL	FURUKAWA
HD709-01012 FRONT BUSHING	FURUKAWA
HD709 SEAL KIT	FURUKAWA
HD612-09001 HOLDER,ACCUMULATOR	FURUKAWA
HD612-07006 DIAPHRAM	FURUKAWA
HD612-03612 BOLT	FURUKAWA
HD612-03601 BOLT,THROUGH	FURUKAWA
HD612-02202 SHANK BUSH	FURUKAWA
HD612-02007 DRIVER	FURUKAWA
HD612-02006 CHUCK DRIVER BUSH	FURUKAWA
HD612-02006 CHUCK DRIVER	FURUKAWA
HD612 - 03604 THROUGH,BOLT	FURUKAWA
HD609-06002 WASHER	FURUKAWA
HD609-06001 BOLT,SOCKET	FURUKAWA
HD609-03602 BOLTS	FURUKAWA
HD609-02203 AIR FLUSHING	FURUKAWA
HD609-02202 FRONT BUSH	FURUKAWA
HD609-02103 THRUST WASHER	FURUKAWA
HD609-02102 PLAIN BEARING	FURUKAWA
HD609-02012 CHUCK	FURUKAWA
HD609-02006 CHUCK DRIVER BUSH	FURUKAWA
HD609-02006 CHUCK	FURUKAWA
HD609-02003 PLAIN BEARING	FURUKAWA

HD609-02002 THRUST BUSH	FURUKAWA
HD609-01313 BUSH	FURUKAWA
HD609-01103 IMPACT PISTON	FURUKAWA
HD609-01019 BUSH	FURUKAWA